




1a) SITE SECTION - A
SCALE: 1/4" = 1'-0"

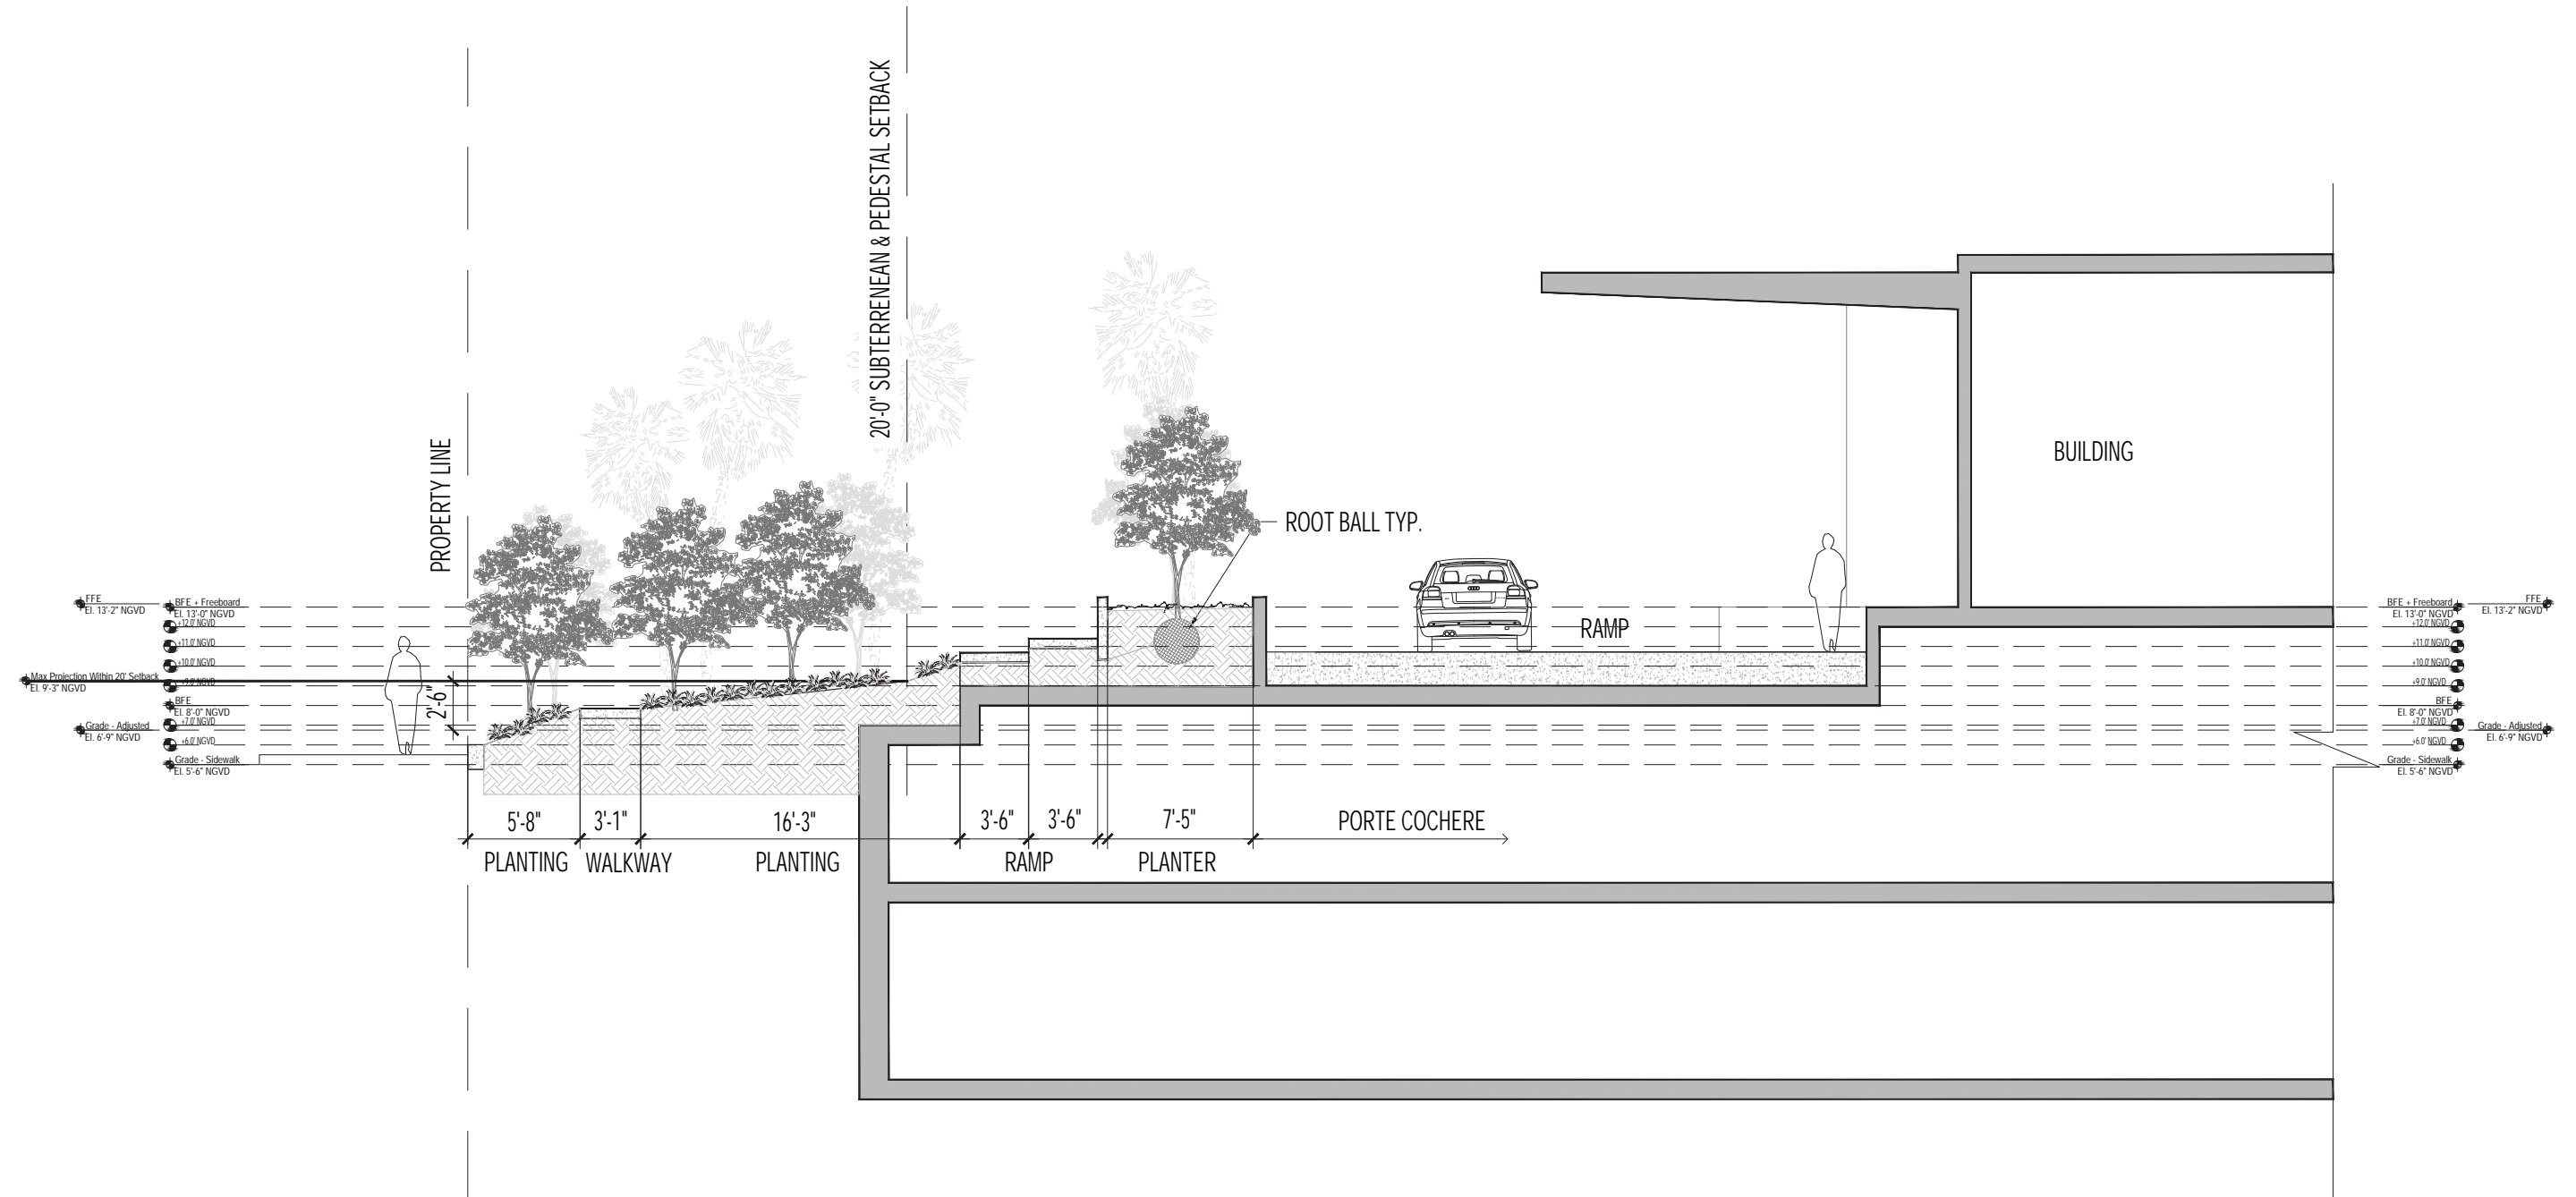


1a SITE SECTION - A
SCALE: 1/4" = 1'-0"

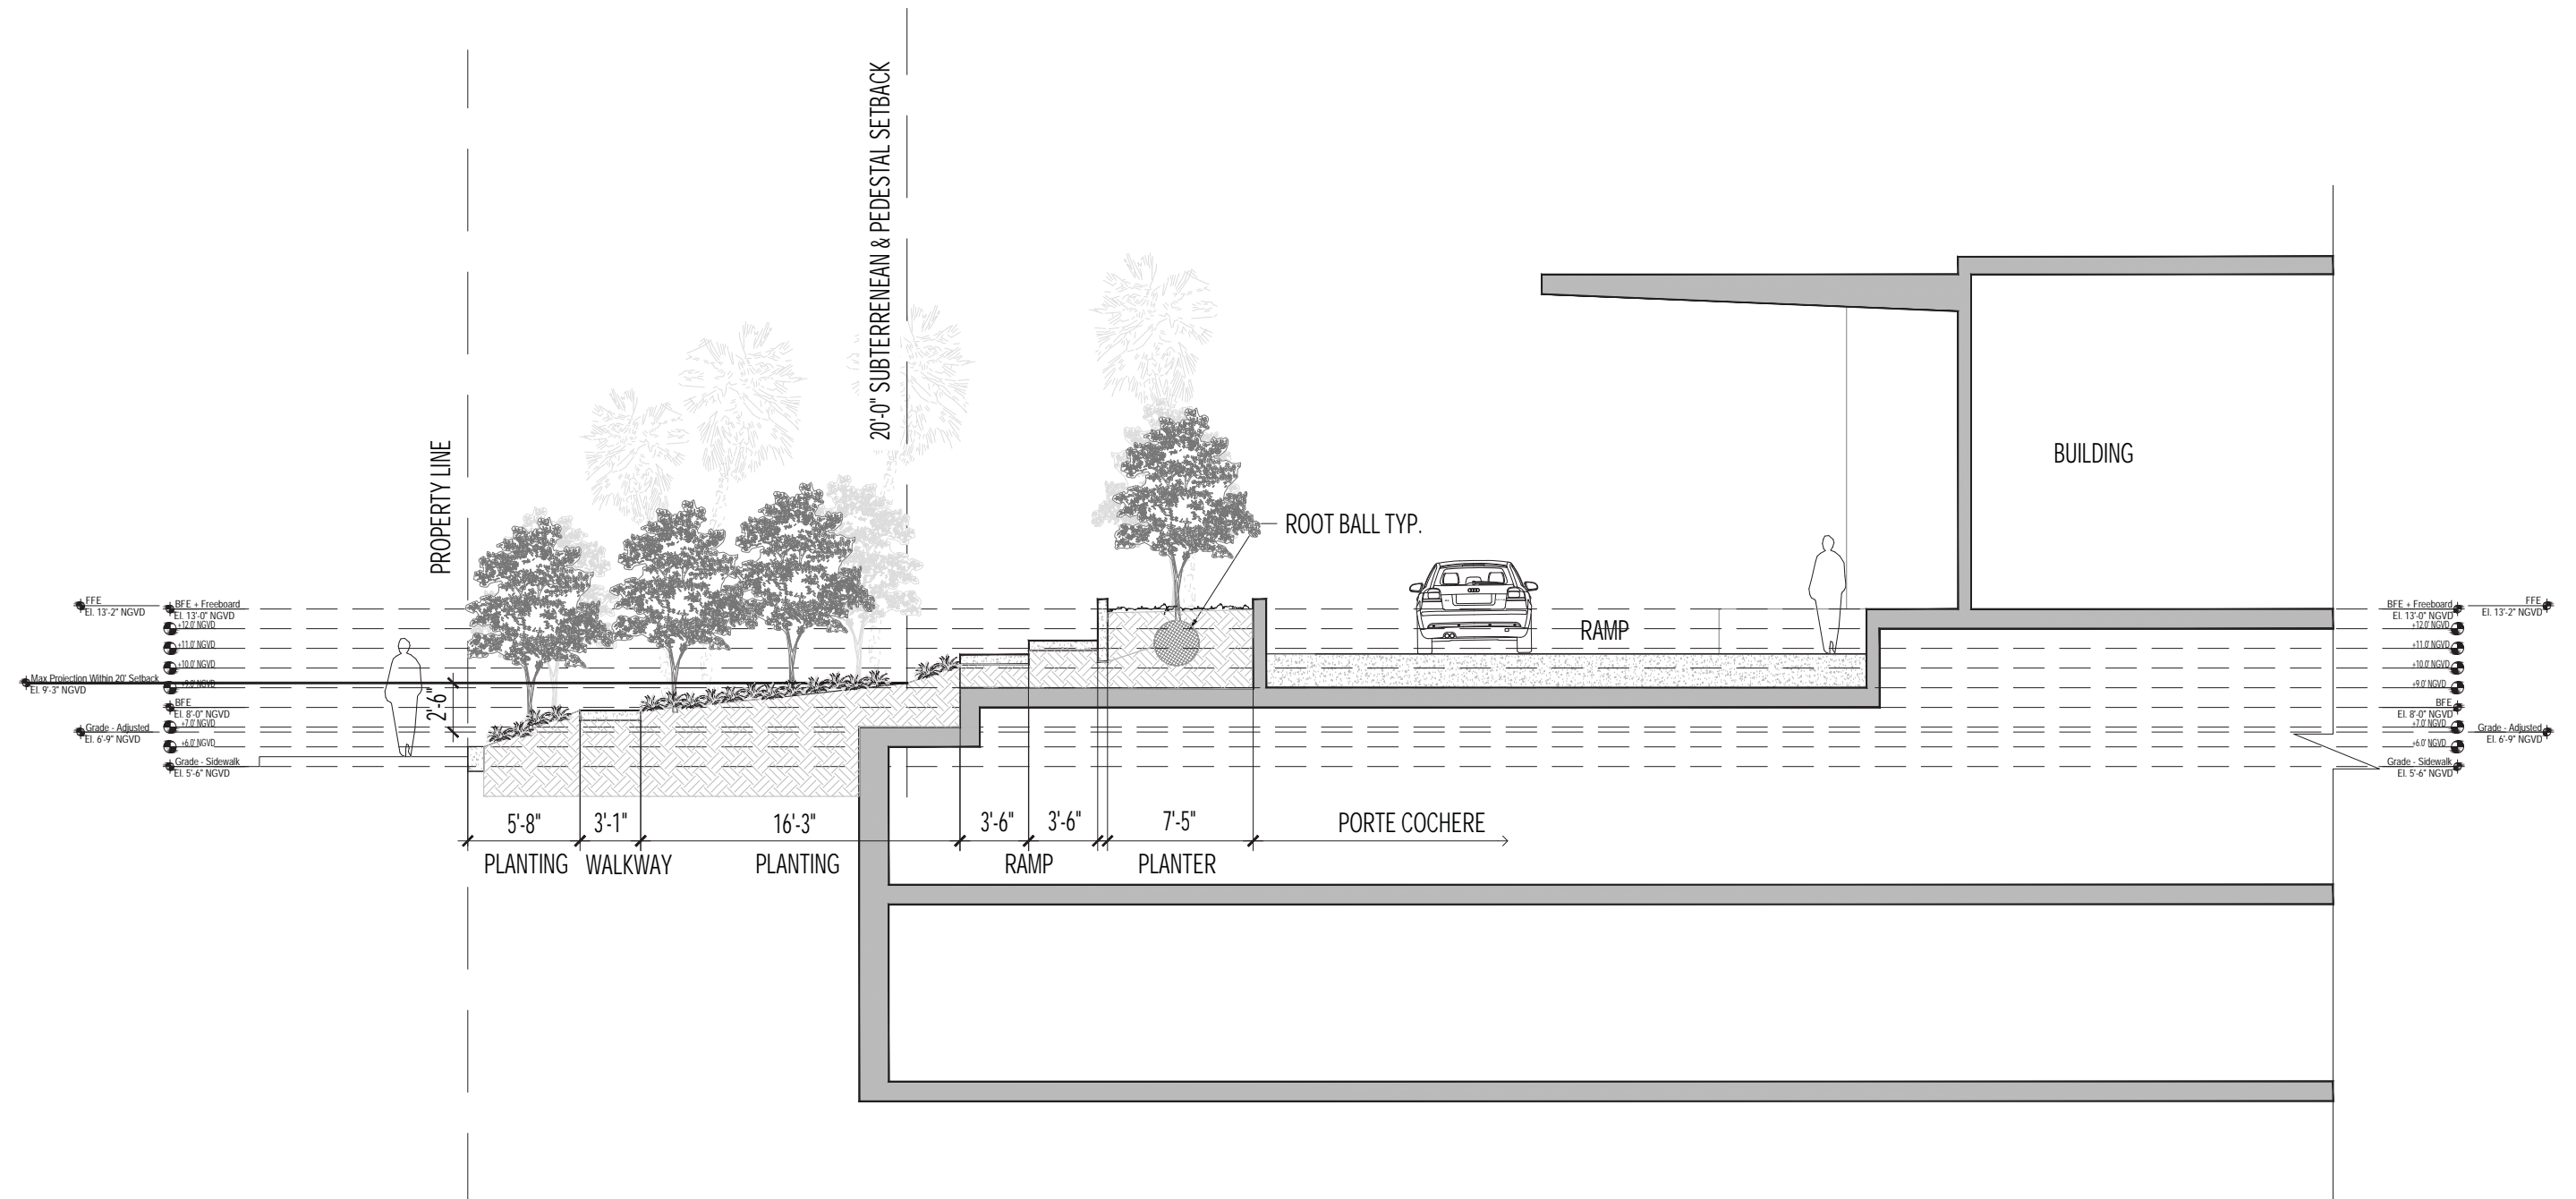


1a SITE SECTION - A
SCALE: 1/4" = 1'-0"

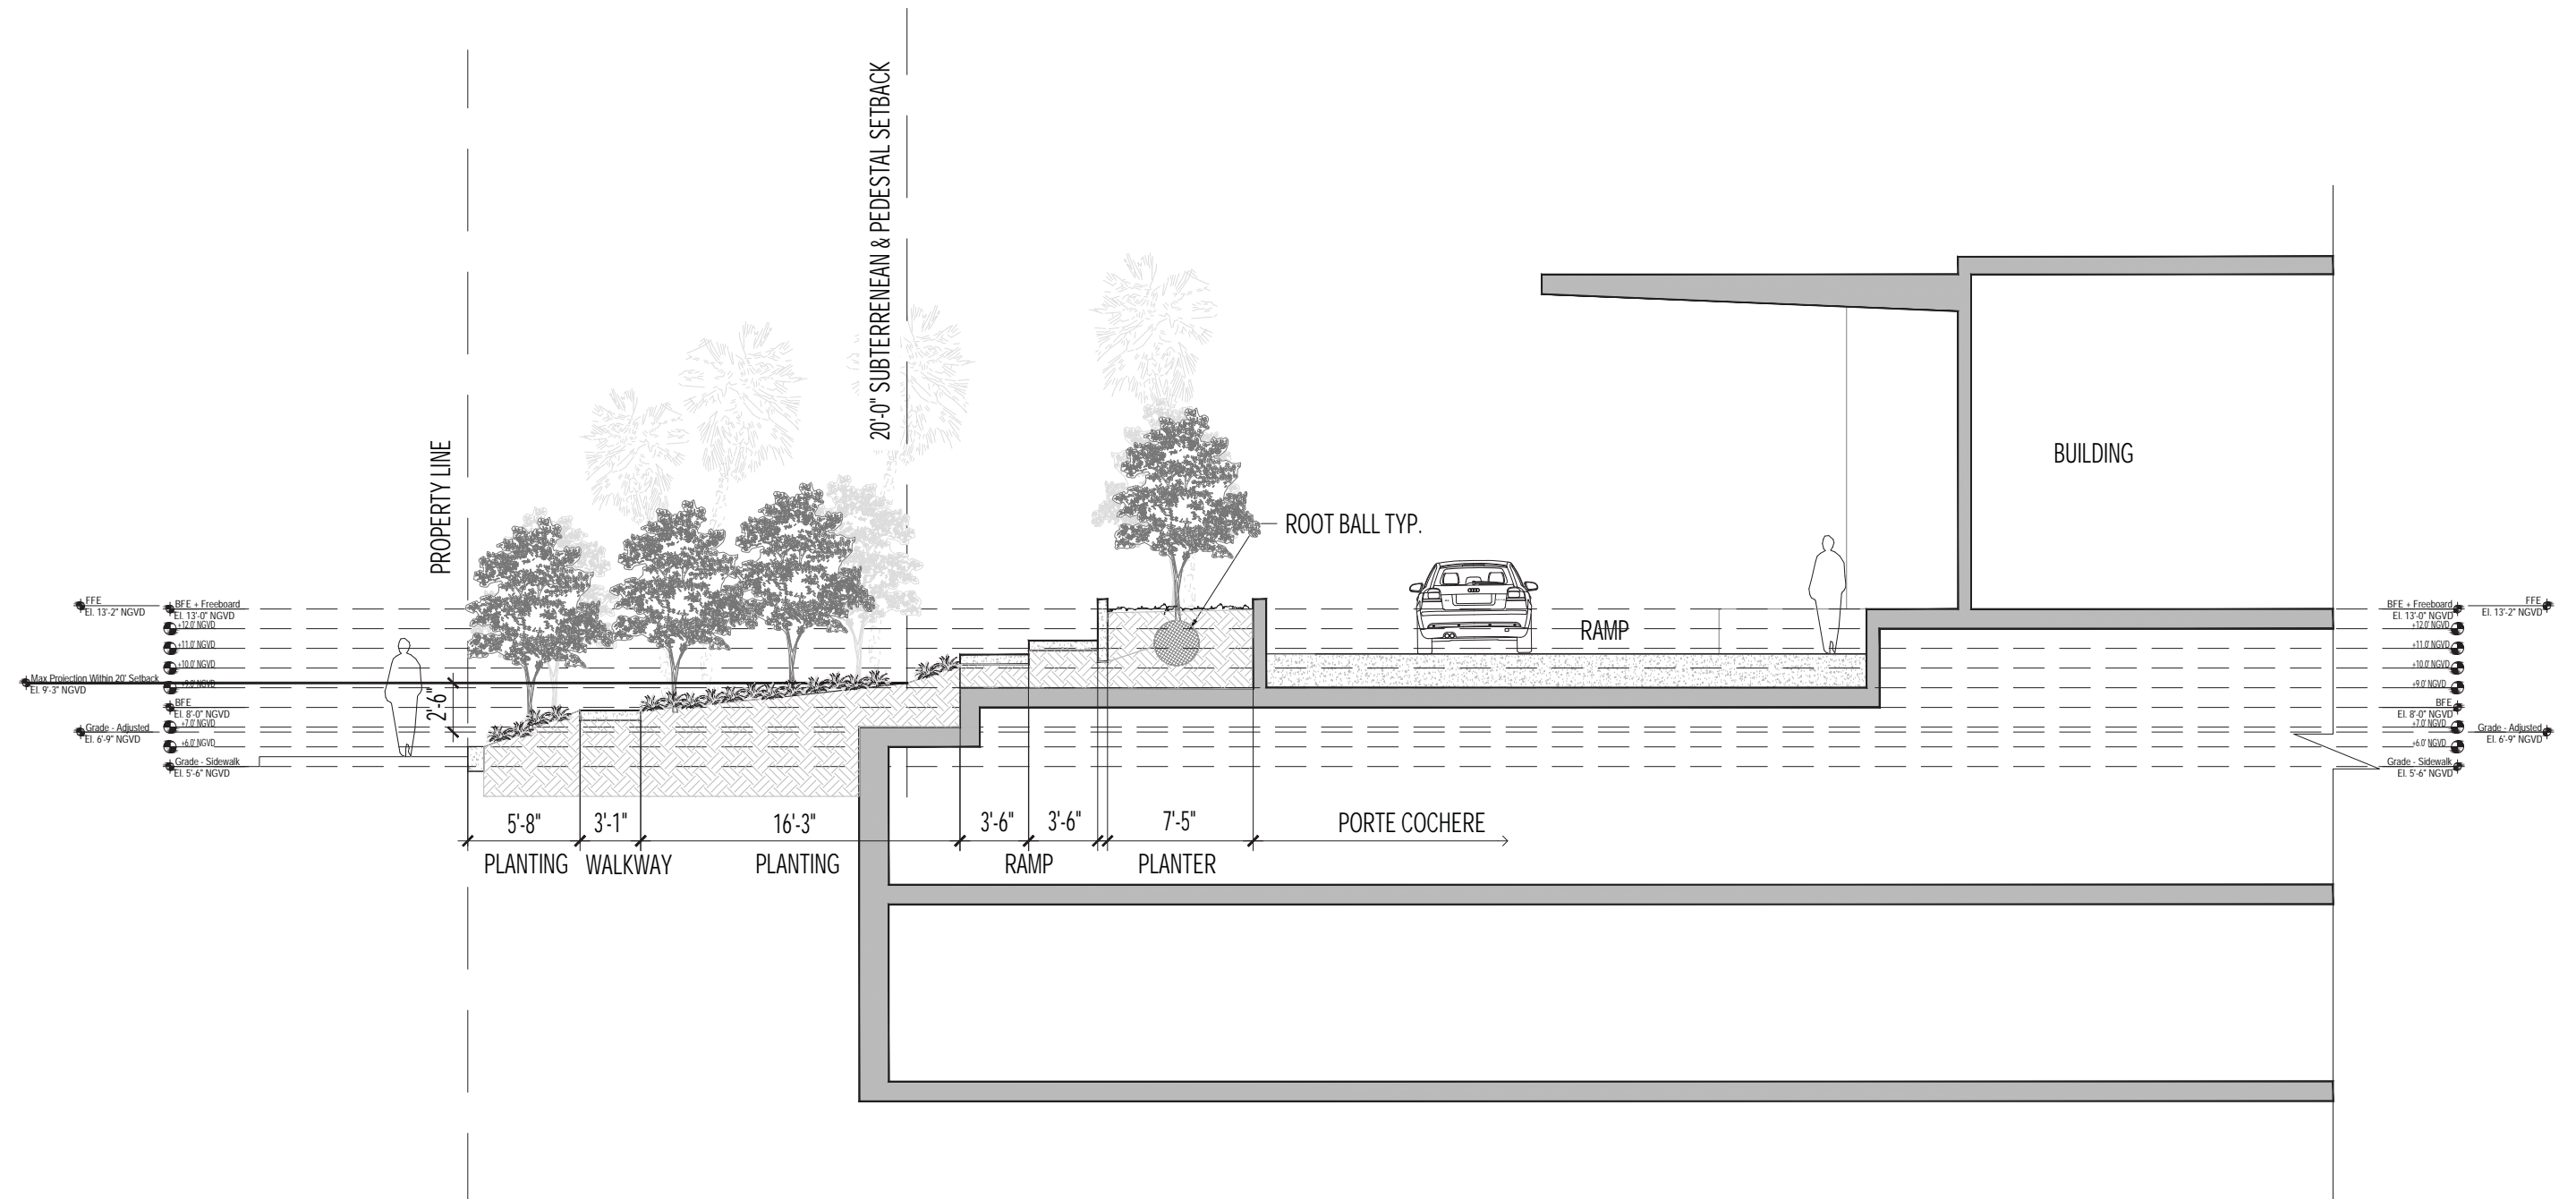


1a) SITE SECTION - A
SCALE: 1/4" = 1'-0"

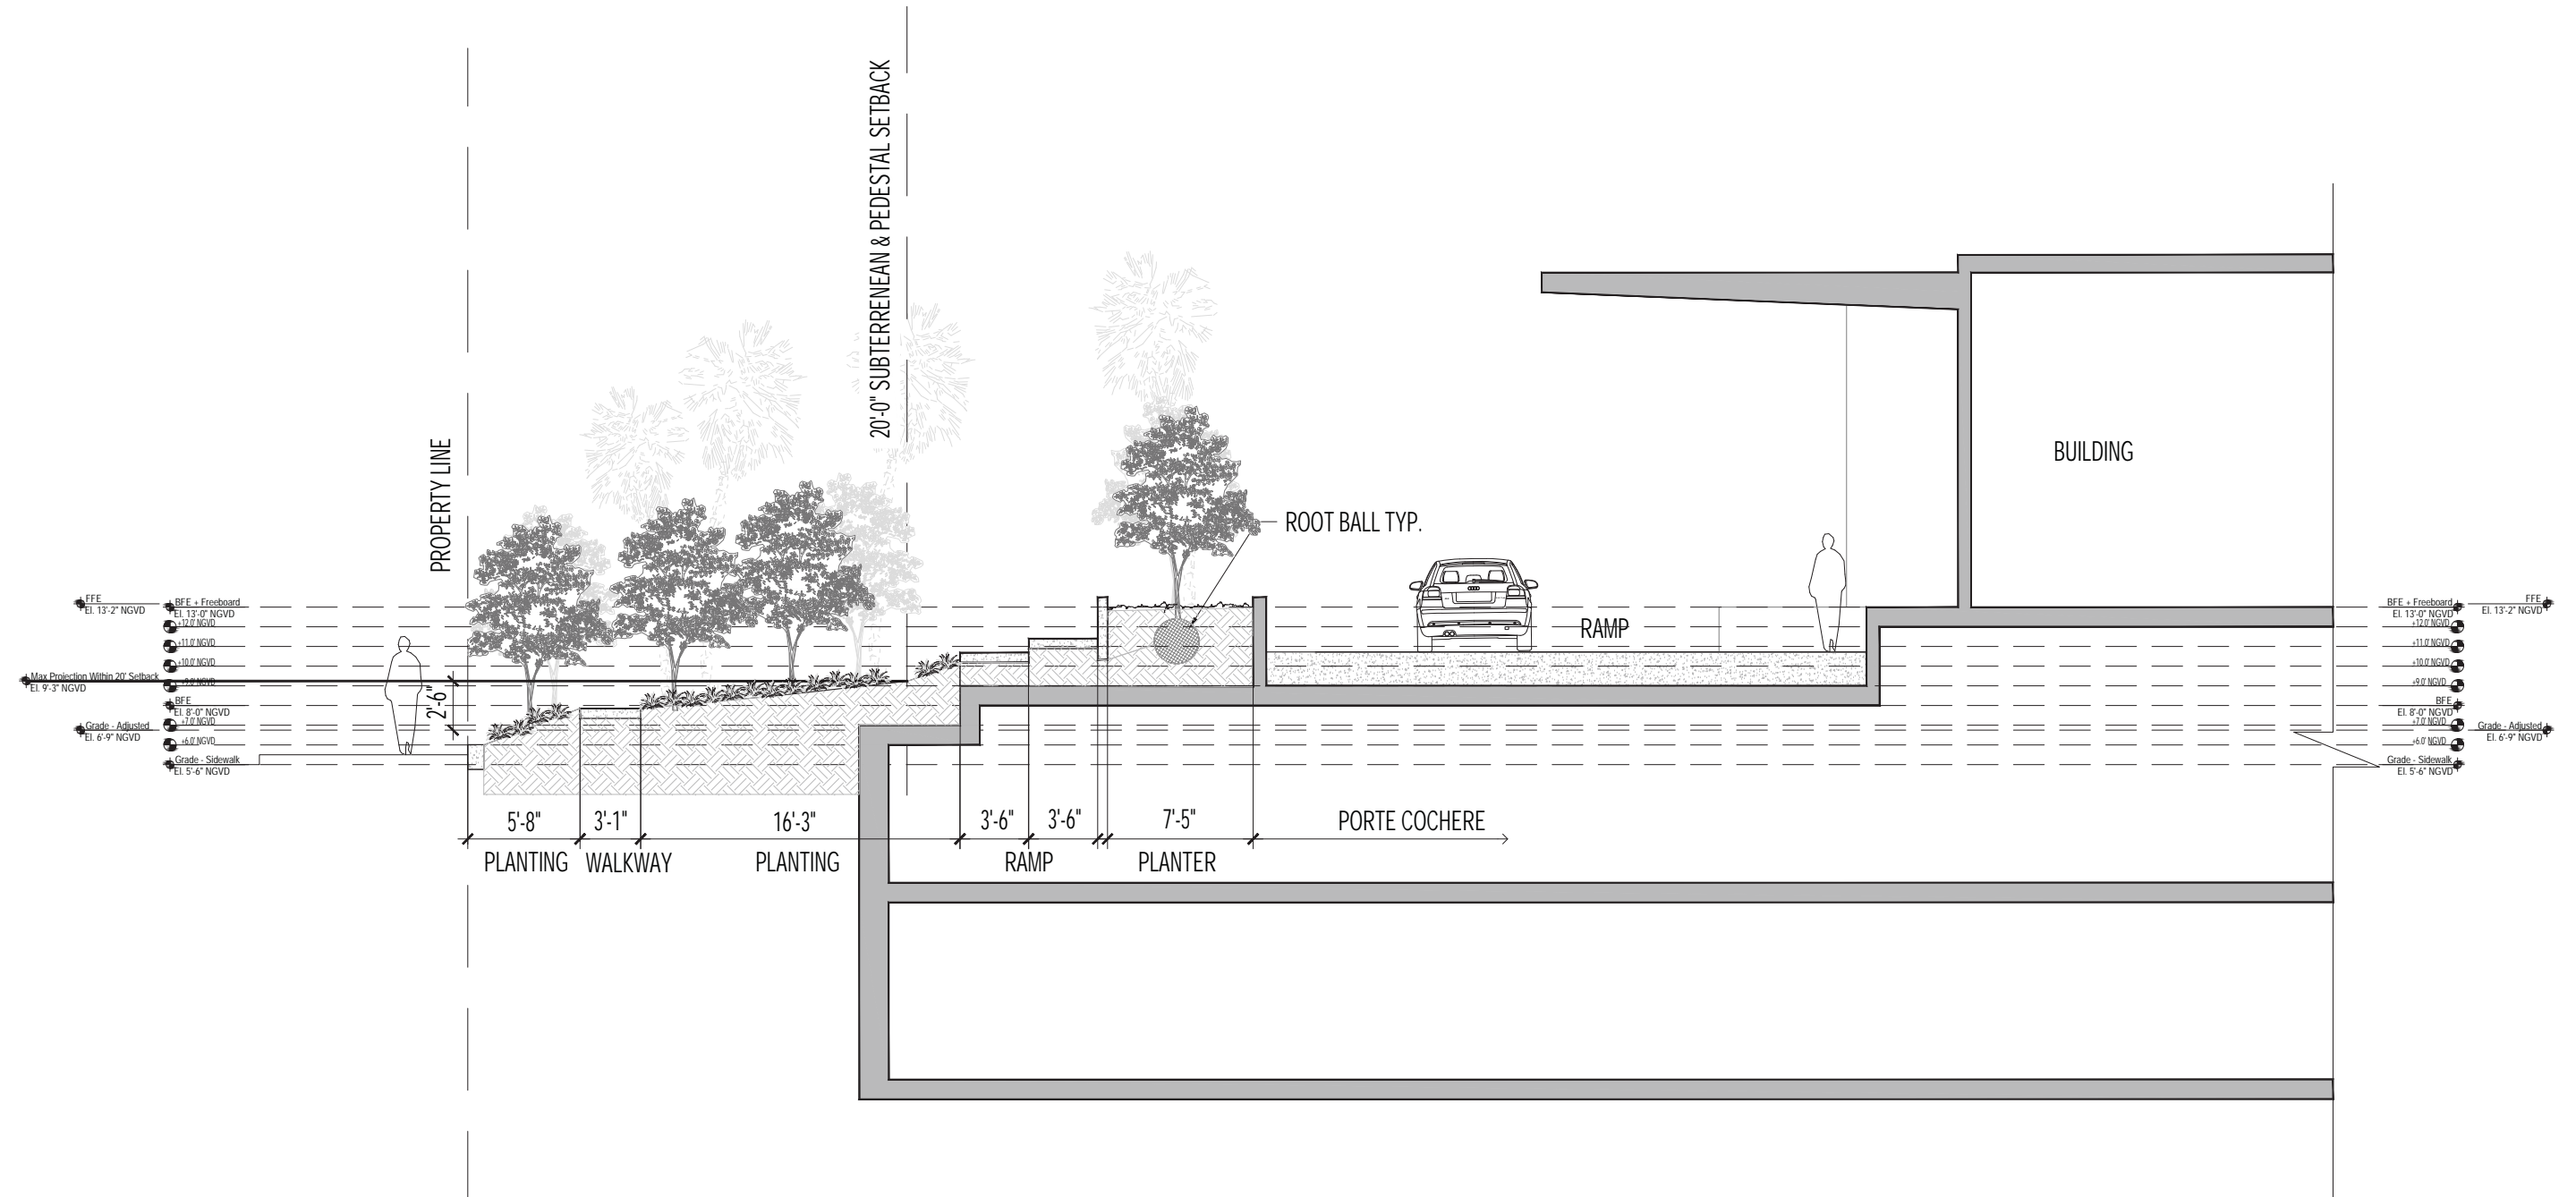


1a SITE SECTION - A
SCALE: 1/4" = 1'-0"

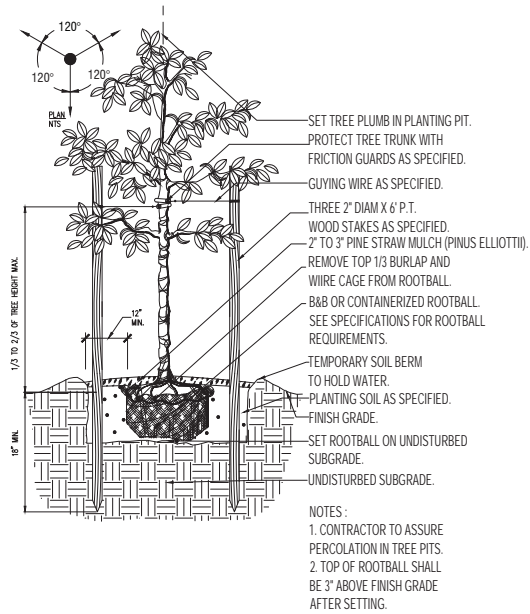


① TYP. SMALL TREE PLANTING
SCALE: 1/4" = 1'-0"

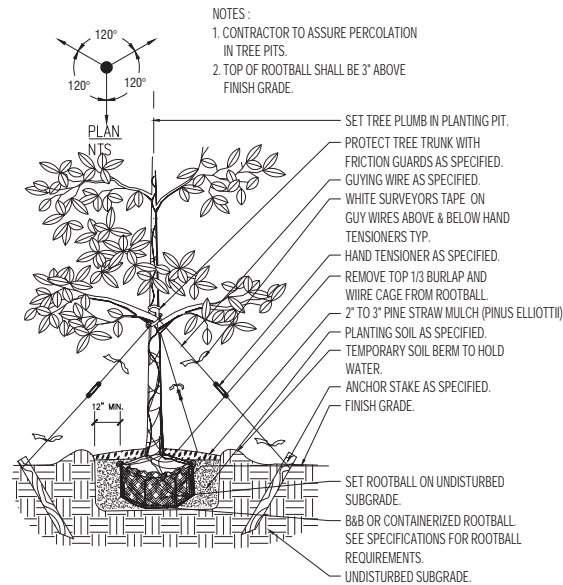

② TYP. LARGE TREE PLANTING
SCALE: 1/4" = 1'-0"

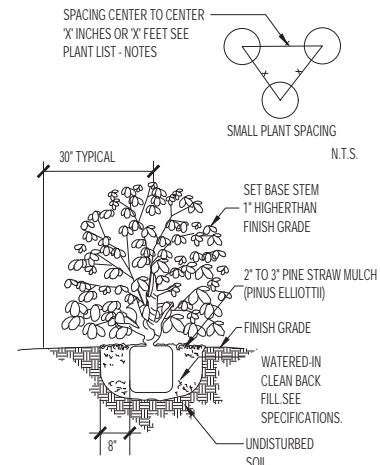

③ TYP. SHRUB & GROUNDCOVER PLANTING
SCALE: 1/2" = 1'-0"

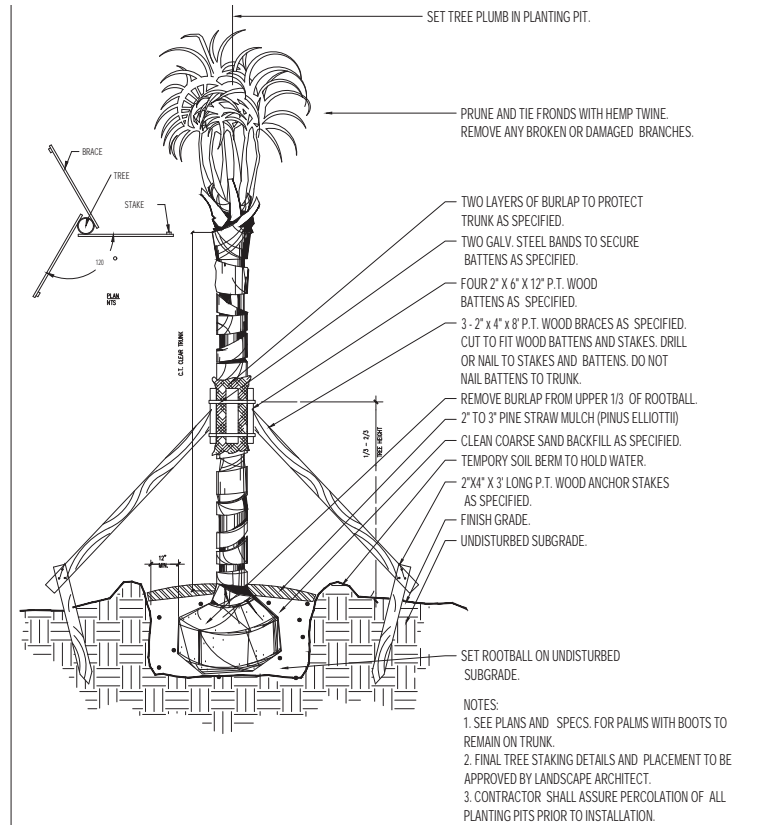

④ TYP. PALM TREE PLANTING
SCALE: 1/4" = 1'-0"