


Hurricane of Trash

Unpackaging + Installation
Instructions

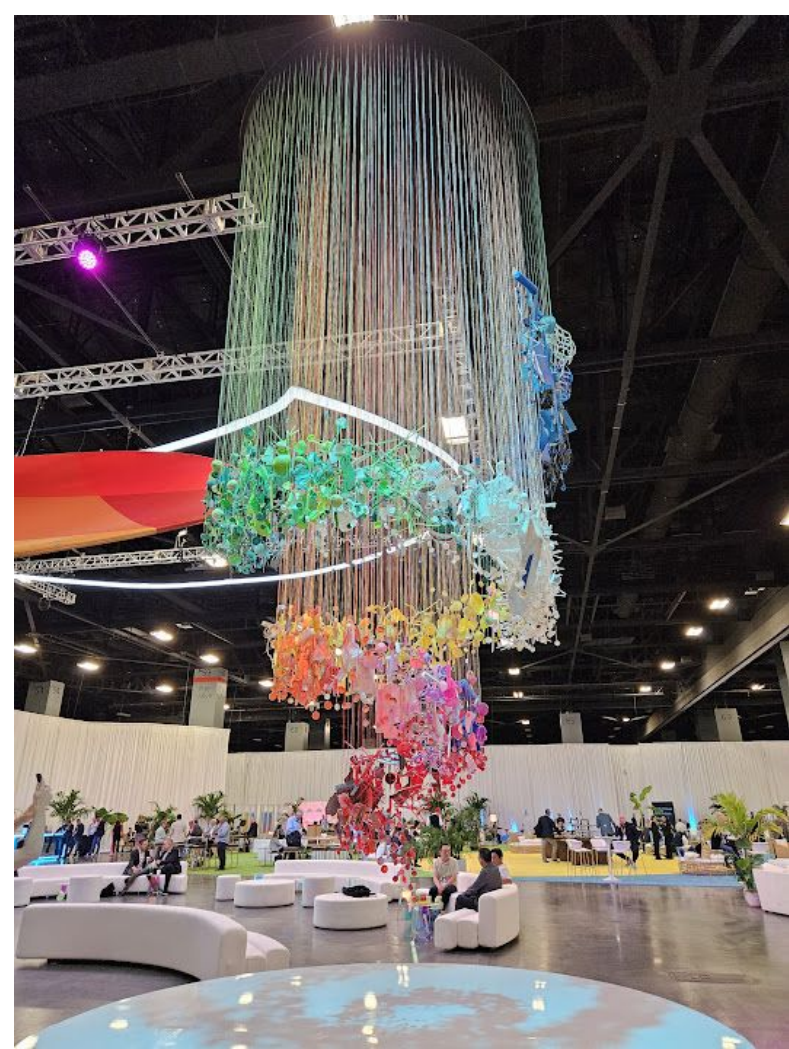

Specs

Total Installation diameter: 8' feet

Total height of installation: 25' feet

Estimated Total Weight: 500 lbs

Pallet components:

- Two 4'x8' semicircles attached to 16-20' strings & plastic waste
- One 3' stabilization disc
- Two 1x3 stabilization boards
- Hanging hardware, 4mm allen key, misc. Screws

Required Tools:

- Impact Driver/Drill
- Motor/Pulley system to raise installation

- **If touchup is needed on disc, paint is Behr [Carbon N520-7](#) in Satin

Unpackaging



1. Remove ratchet straps and cardboard lids from both pallets

Unpackaging





2. Remove bubble wrap/soft packaging material surrounding black disc
3. Identify 3' stabilization disc and 2 1x3 boards and set aside (these will be used to assemble the entire disc)

Assembling the Disc




4. Place pallets underneath desired hanging location. Adjust the pallets so they are side by side and the center seam is aligned between the 2 semi-circles
5. Join the two semicircles so they are flush. 2 people are needed in checking the seam on both ends. Make sure the Lamello connectors are aligned throughout the seam.

Assembling the Disc

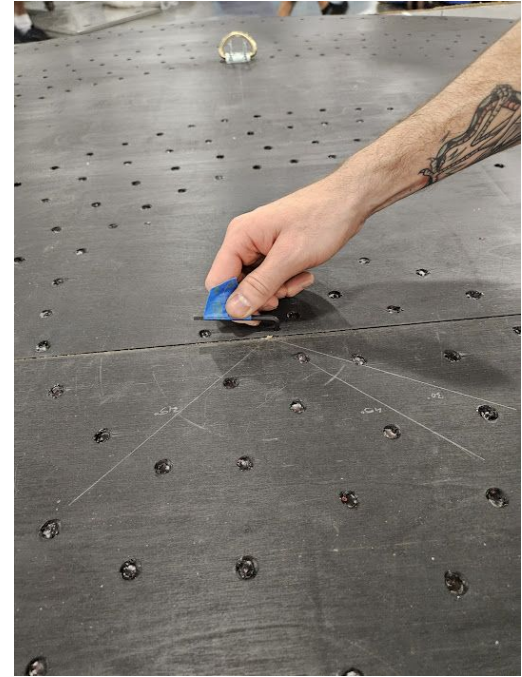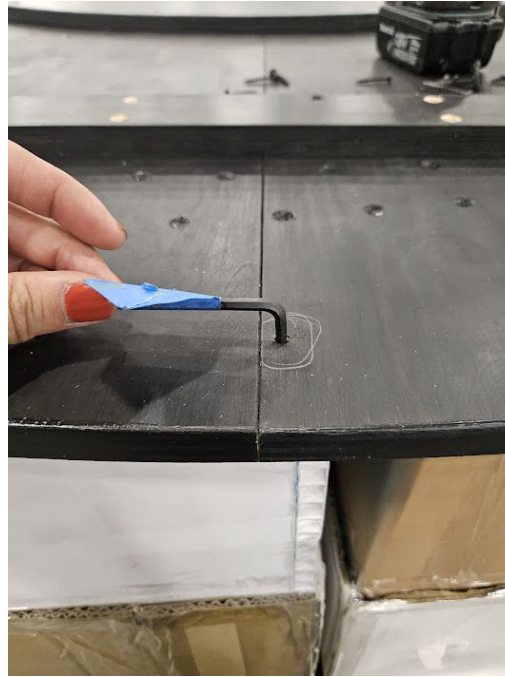


6. Using the provided 4mm allen key, tighten the Lamello connectors to join the semi circles (holes are circled in pencil along seam of semi circle). Be careful to not strip the hardware; 1/4 rotation will suffice in tightening the hardware.

Assembling the Disc

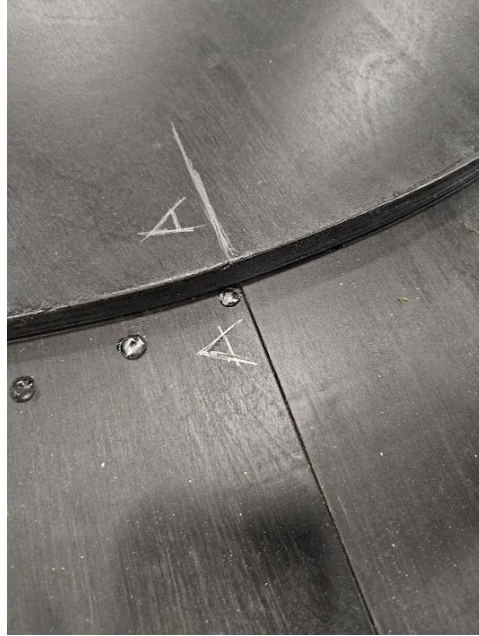

7. Place the 3' stabilizer disc and 1x3 wood boards as pictured; be sure to match placement within the drawn outlines and corresponding labels (A & B)
8. Use 1 1/4"-1 3/8" screws to attach pieces together through pre-drilled holes

Installation

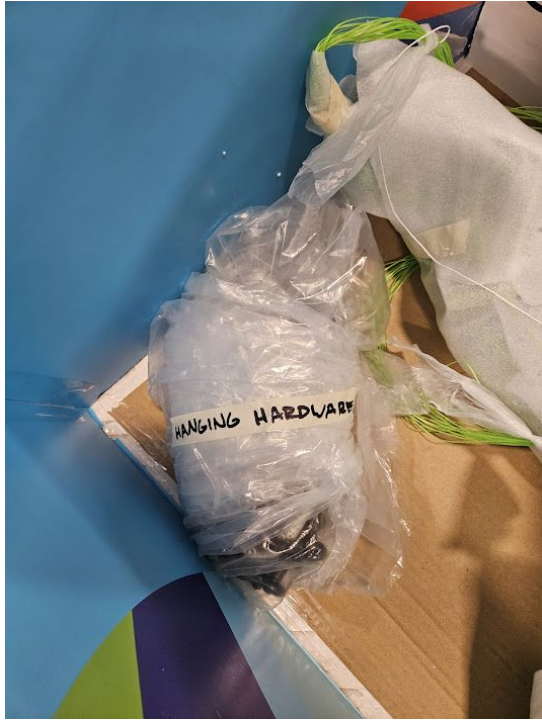

9. Locate hanging hardware and attach 6 cable hooks to 6 rings on disc


10. Attach main hook/hanging point to pulley/motor/winch. Installation must be lifted slowly by motor or pulley system.

Installation



11. Slowly raise the disc about 1 foot at a time, ensuring that strings are not getting caught or tangled.
12. As the disc is raised, remove the plastic ties that bundle around the strings, starting from the top-down. Leave the lowest 2 ties attached for now; these will be removed after unwrapping the plastic waste bundles.

Installation

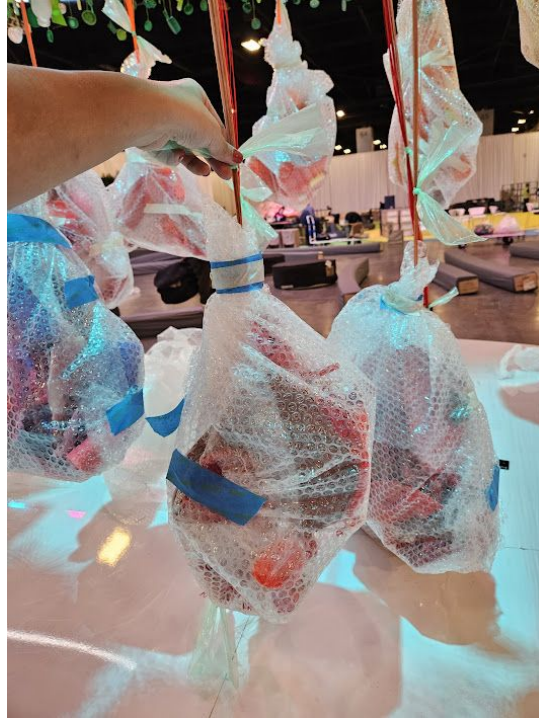

13. Carefully remove packaging from plastic waste bundles.

14. Remove last bits of plastic ties and detangle where needed. Strings should mostly fall into place.

15. Adjust to desired hanging height.